

SUPPLEMENT TO PRIMAL RAGE OPERATOR'S MANUAL
CHAPTER 3 - TROUBLESHOOTING AND MAINTENANCE
PAGE 3-3

SYSTEM LOGIC ASSEMBLIES

*** Primal Rage Games PCB Set**

3. Disconnect the harness connectors from the game PCB and Video adjust PCB set. (There are 9 connectors in all.)